

561-443 Heavy Duty Football Goal - Pair

Page 1 of 2
Rev. 04/18/03

IMPORTANT

PLEASE READ THESE INSTRUCTIONS BEFORE COMMENCING ASSEMBLY. All equipment must be installed in accordance with these instructions. Check your shipment against Bill of Lading and Parts list. Any missing or broken parts must be reported to your distributor within 10 days of receipt of your order. When properly installed and maintained, equipment will give many years of Safe, Trouble-Free use. Periodically check for loose or broken parts. Loose bolts must be tightened and broken parts must be replaced as they can possibly create dangerous situations leading to unnecessary accidents.

PACKING LIST

1	CTN	1	Hardware Bag	16
2	PIPE	1	563-203 Cross Bar 3 1/2" x 23'8"	4
4	PIPE	1	563-204 Uprights 1 7/8" x 10'6"	1
4	PIPE	1	543-603 Post 3 1/2" OD x 13'	

HARDWARE BAG

196-806	1/2" x 1/2" Socket Set Screws
105-016	1 7/8" Pipe Plugs
416-400	1/4" Socket Key

1CTN

10 PIPE

11 TOTAL PCS

600# Weight

Class 70

561-443 Heavy Duty Football Goal - Pair

Page 2 of 2
Rev. 04/18/03

ASSEMBLY AND INSTALLATION:

NOTE: All threaded ends of bolts protruding beyond nuts must be cut off and/or peened to eliminate sharp edges. No more than two threads should extend beyond face of nut. All washers, "T" nuts, and other fastener hardware used on round pipe or tubing must be hammered down to conform to the curved underlying surface to eliminate catch points.

DO NOT tighten nuts more than hand-tight until entire assembly is completed.

STEP #1: Mark and dig footing holes

STEP #2: Assemble Goal posts

STEP #3: Pour footings using:

60 - 80lb. Bags Pre-Mix Cement - 15 bags per hole.

Place bricks or old cement chunks below the posts to allow wet cement under the post. Be sure to maintain the height and distance between posts, per diagram on page 1, for each goal post.

Be sure to 'cone' the top of the pour for drainage.

STEP #4: Plumb and level posts.

STEP #5: Brace posts until cement is dry.

NOTES: Wait 48 hours for concrete to harden before using unit.

DO NOT install where overhead electrical wires are present.

MAINTENANCE INSTRUCTIONS:

Check periodically for loose bolts, broken parts and replace immediately.