


551-420 Baseball Backstop without Hood
551-421 Baseball Backstop with Hood

IMPORTANT

Please retain this instruction sheet in your files. It contains important maintenance instructions, as well as replacement parts information.

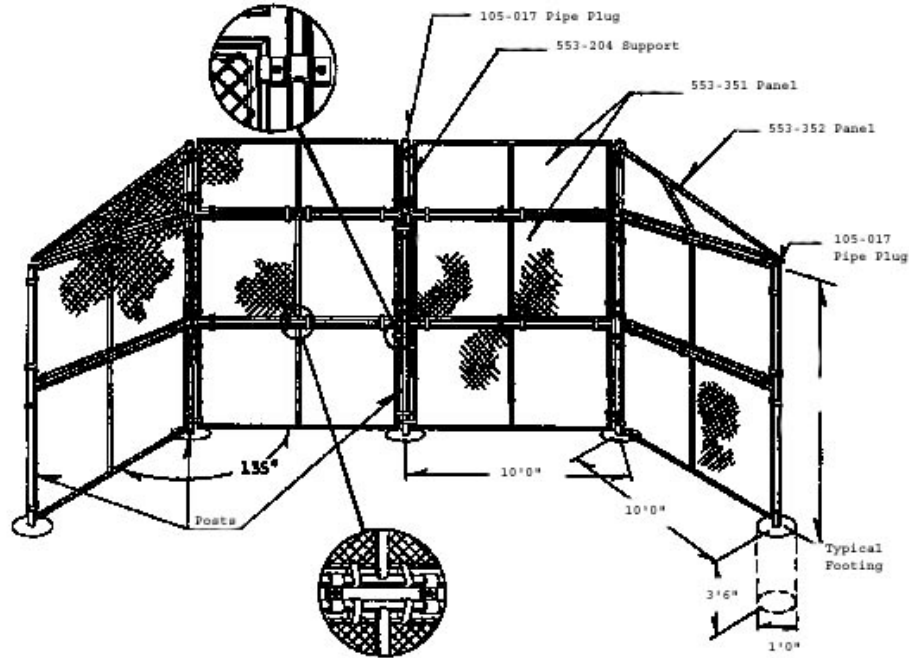

551-420 WITHOUT HOOD

1	CTN		Hardware Bag
8	WF	553-351	Panels
5	PIPE	553-602	2 3/8" OD x 13'0"
			<u>HARDWARE BAG</u>
5		105-017	2 3/8" Pipe Plug
16 pr		551-511	1" x 1" Saddle Clamps
32 pr		555-512	1" x 2 3/8" Saddle Clamps
64		126-505	5/16" x 1 1/4" Carriage Bolts
16		116-504	5/16" x 1" Hex Bolts
80		326-501	5/16" Lock Washers
80		216-501	5/16" Hex Nuts

551-421 WITH HOOD

1	CTN		Hardware Bag
3	PIPE	553-204	Hood Support
10	WF	553-351	Panel
2	WF	553-352	Panel
5	PIPE	553-602	2 3/8" OD x 13'0"
			<u>HARDWARE BAG</u>
5		105-017	2 3/8 OD Pipe Plugs
32 pr		555-511	1" x 1" Saddle Clamps
44 pr		555-512	1" x 2 3/8" Saddle Clamps
88		126-505	5/16" x 1 1/4" Carriage Bolts
32		116-504	5/16" x 1" Hex Bolts
120		326-501	5/16" Lock Washers
120		216-501	5/16" Hex Nuts
3		196-806	1/2" x 3/4" Socket Set Screws
1		416-400	3/4" Socket Key

1 CTN 8 PANEL 5 PIPE 14 Total Pcs.
650# Total Weight CLASS 70

1 CTN 12 PANEL 8 PIPE 21 Total Pcs.
840# Total Weight CLASS 70

551-420 Baseball Backstop without Hood

551-421 Baseball Backstop with Hood

Page 2
Rev 06/18/03

TOOLS NEEDED FOR THE JOB:

Post Hole Digger
Level
14 cu. ft. of Pre-Mix Concrete

Crescent Wrench
Socket Wrench

GENERAL ASSEMBLY INSTRUCTIONS

1. Check each piece carefully and remove any sharp projections that may have been caused by shipping.
2. DO NOT Tighten nuts more than hand-tight until the entire assembly is completed.
3. All threaded ends of bolts protruding beyond nuts should be cut off and peened over to remove any sharp edges.

SPECIFIC ASSEMBLY INSTRUCTIONS:

1. Mark and dig footing holes as shown on page one.
2. Assemble one center section of backstop on ground with bottom of upright posts at the front edge of the footing holes.
3. Hand-tighten all bolts securely.
4. Raise assembly into position in footing holes.
5. Assemble each additional section in a similar manner. Raise and attach to sections already in place.
6. **(for 551-421 model only)** Add hood sections.
7. Plumb and level backstop. Tighten all bolts securely.
8. Pour footings. Place bricks or old cement chunks below the posts to allow wet cement under the post.
9. Allow 48 hours for cement to dry before using the equipment.

MAINTENANCE:

Check periodically for loose bolts and broken parts. Tighten and/or and replace immediately.